Vehicle Information	
Year	1999
Make	Dodge
Model	Ram

Enclosure Information	
Design Type	Bass-Reflex
Placement	Behind the seats
Orientation	Position the enclosure with the subs directed forward, vent directed toward the passenger side.

AUDIO DYNAMICS

Special Notes

Amplifier Information		
Continuous Power Handling	1,200	**W**
Subsonic Filter Setting	28	**Hz**
Low Pass Filter Setting	55	**Hz**

Subwoofer Information	
Make	Audio Dynamics
Model	AD3010 D4
Quantity	2

Performance Information	
SQ	✓ Within the Vehicle
✓ **SQL**	Outside the Vehicle
SPL	Metering Position

Metering Information		
Headrest		
Dash / Windshield	**Peak Frequency**	**Hz**
Foot Well		

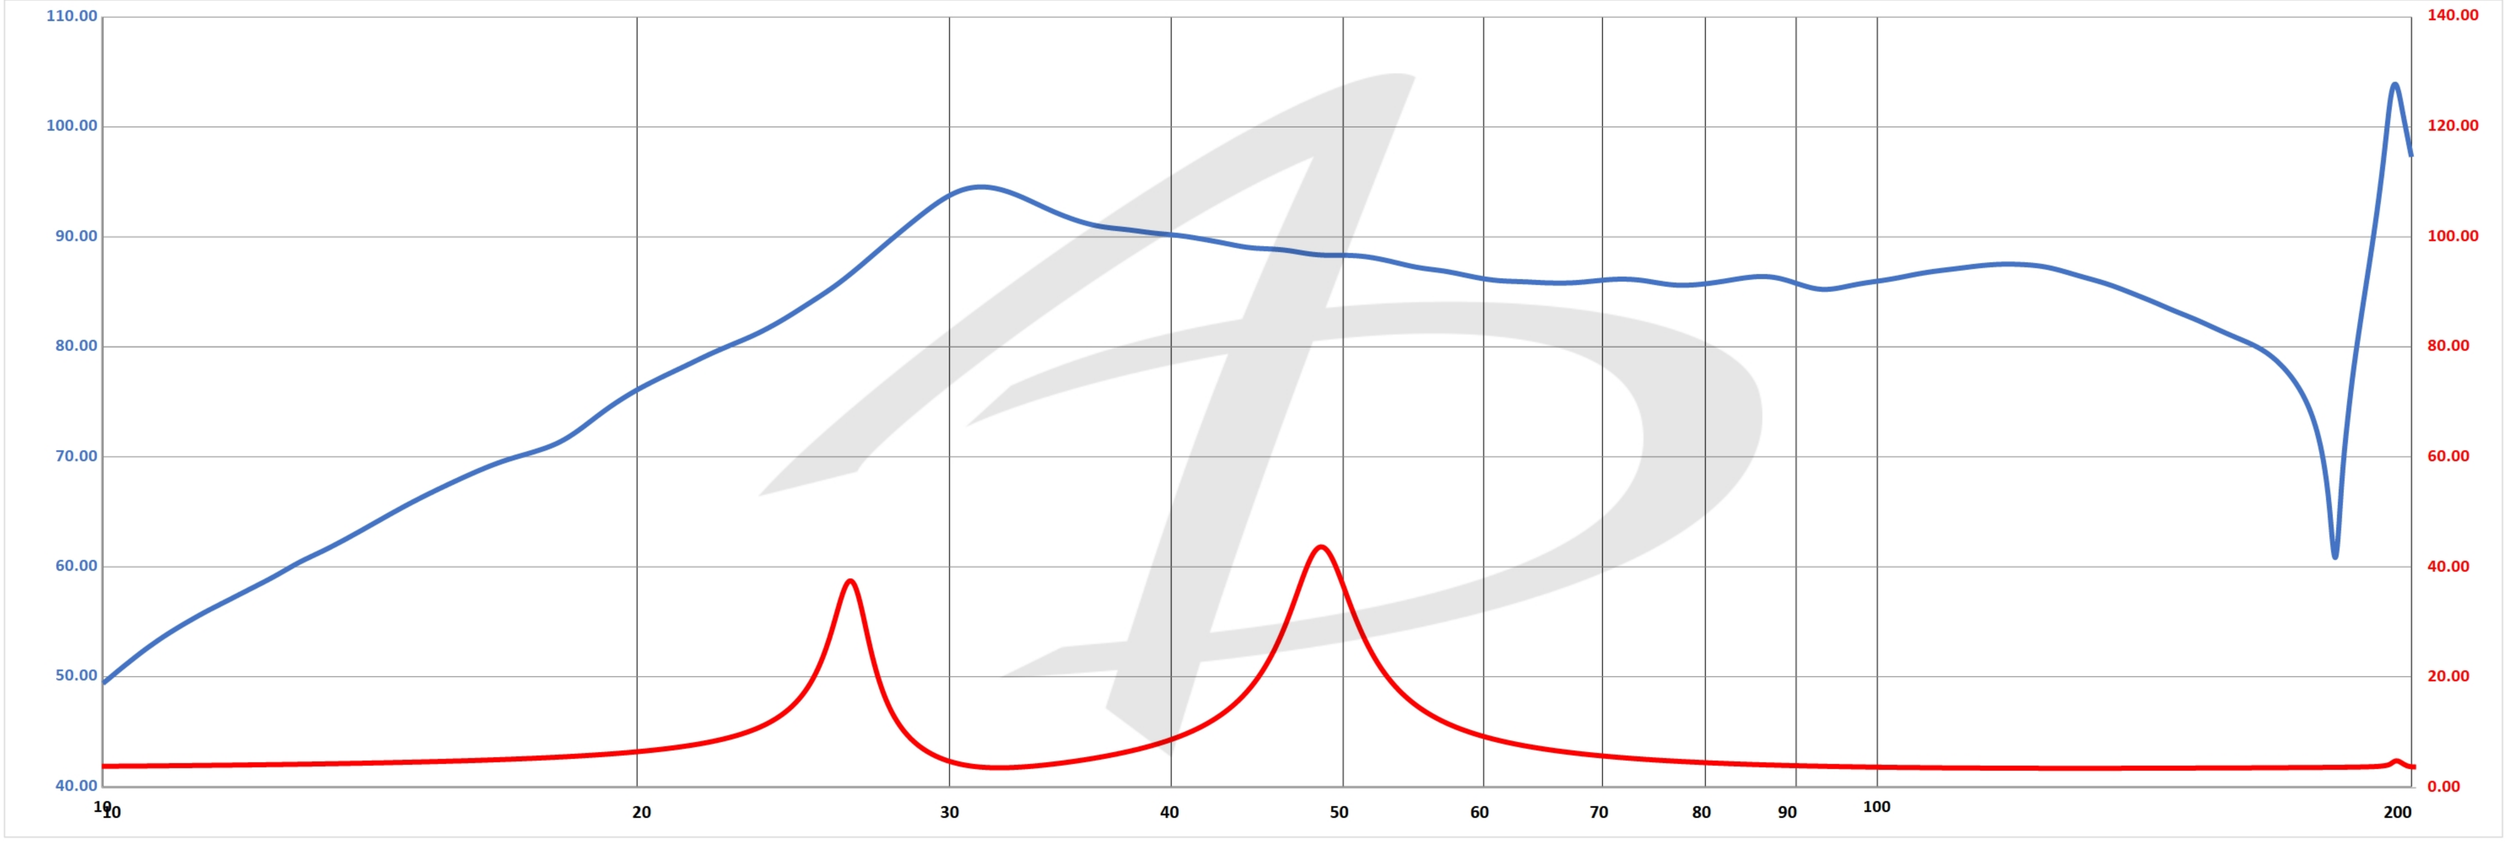

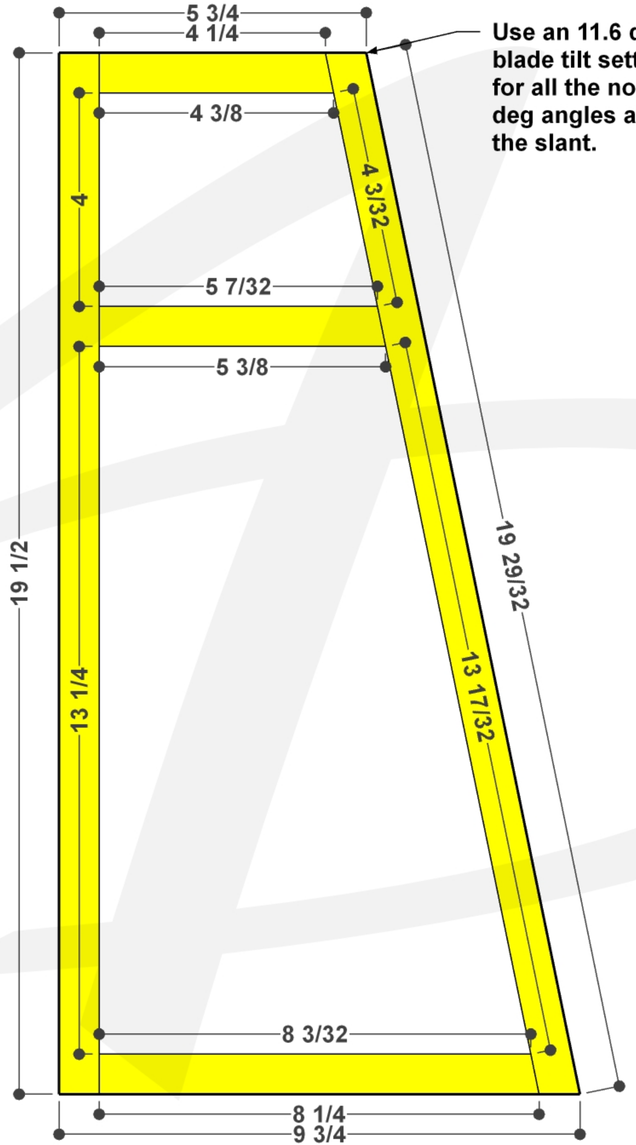
5 3/4
4 1/4
Use an 11.6 deg. blade tilt setting for all the non-90 deg angles along the slant.
4 3/8
4
4 3/32
5 7/32
5 3/8
19 1/2
19 29/32
13 1/4
13 17/32
8 3/32
8 1/4
9 3/4

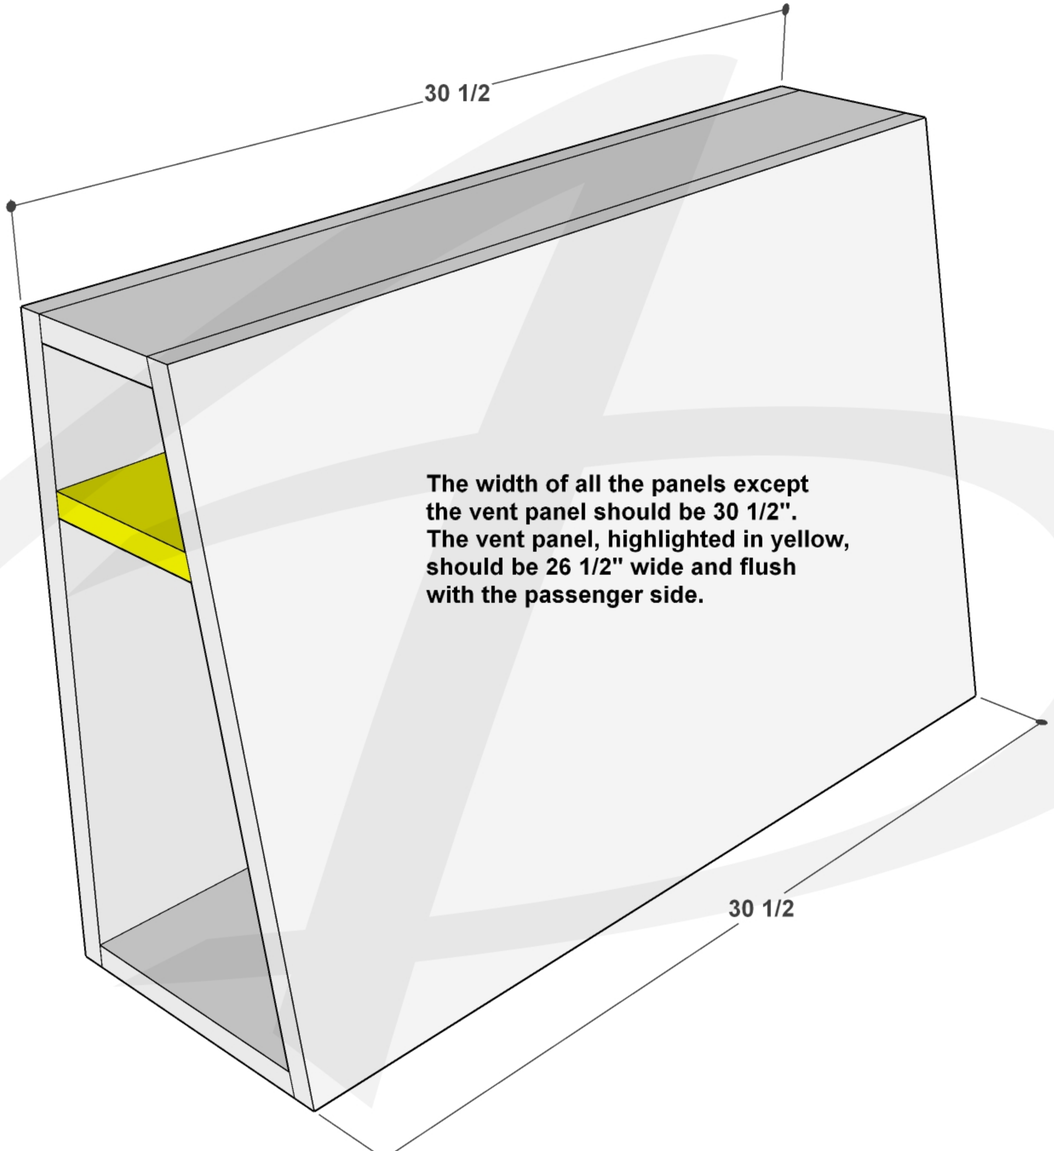
30 1/2
The width of all the panels except
the vent panel should be 30 1/2".
The vent panel, highlighted in yellow,
should be 26 1/2" wide and flush
with the passenger side.
30 1/2

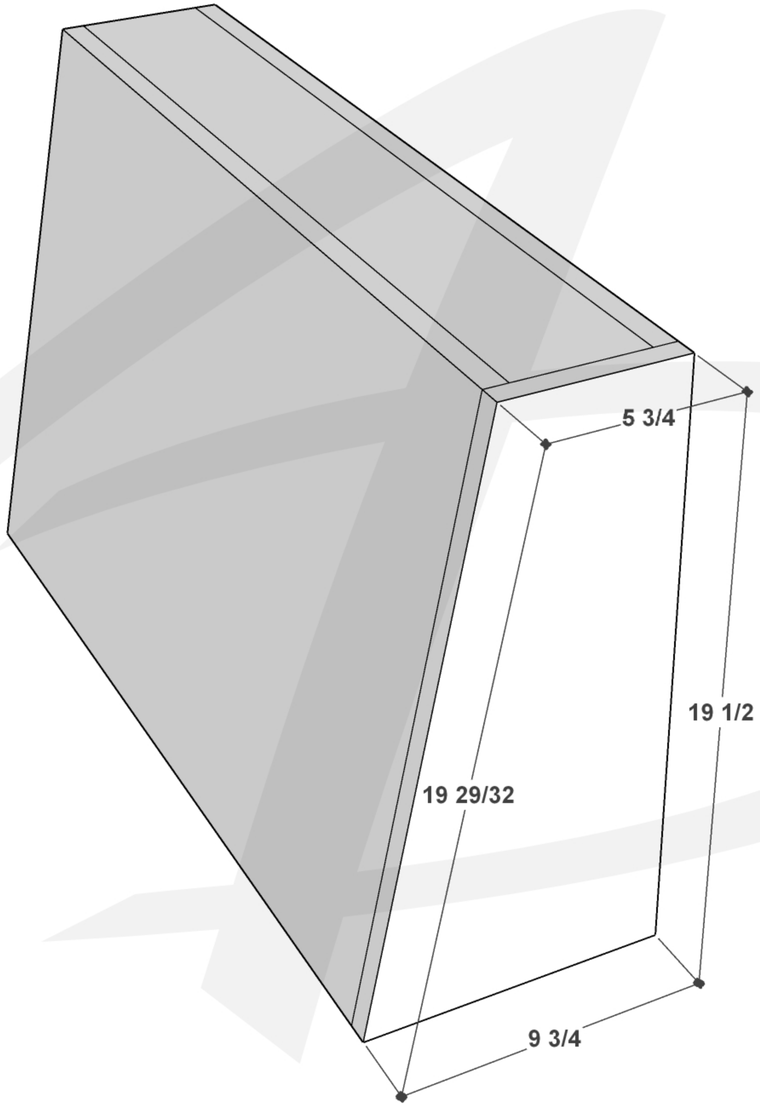
5 3/4
19 1/2
19 29/32
9 3/4

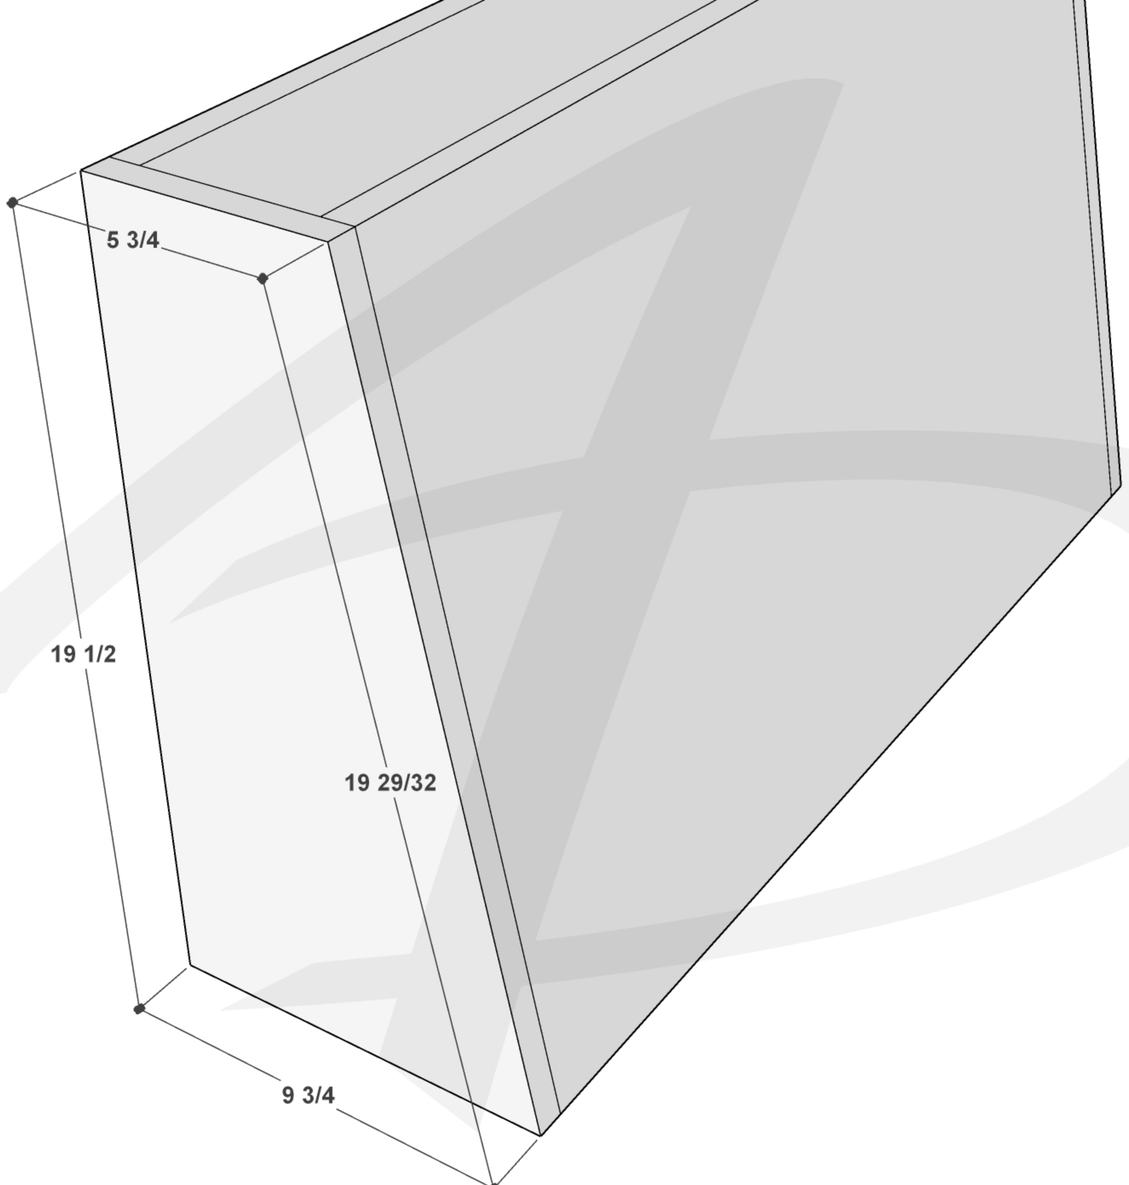
5 3/4
19 1/2
19 29/32
9 3/4

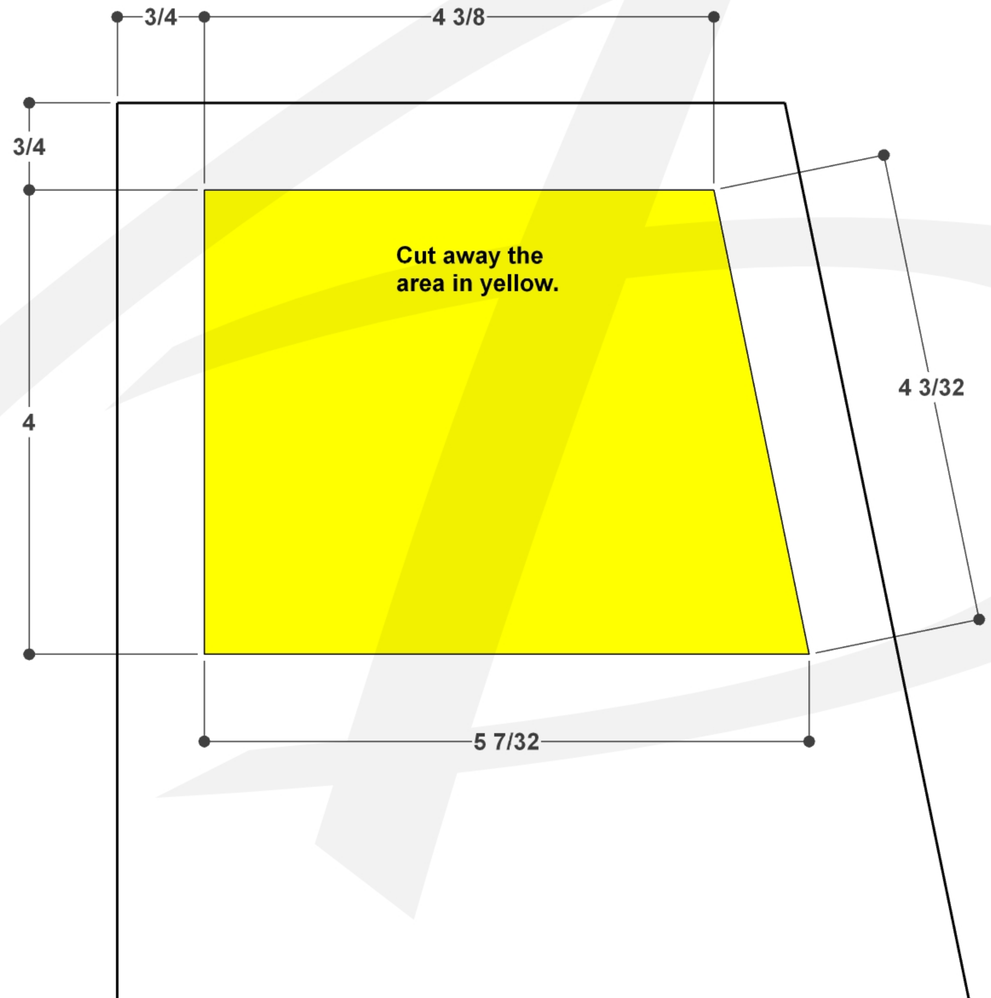
3/4
4 3/8
3/4
Cut away the
area in yellow.
4 3/32
4
5 7/32

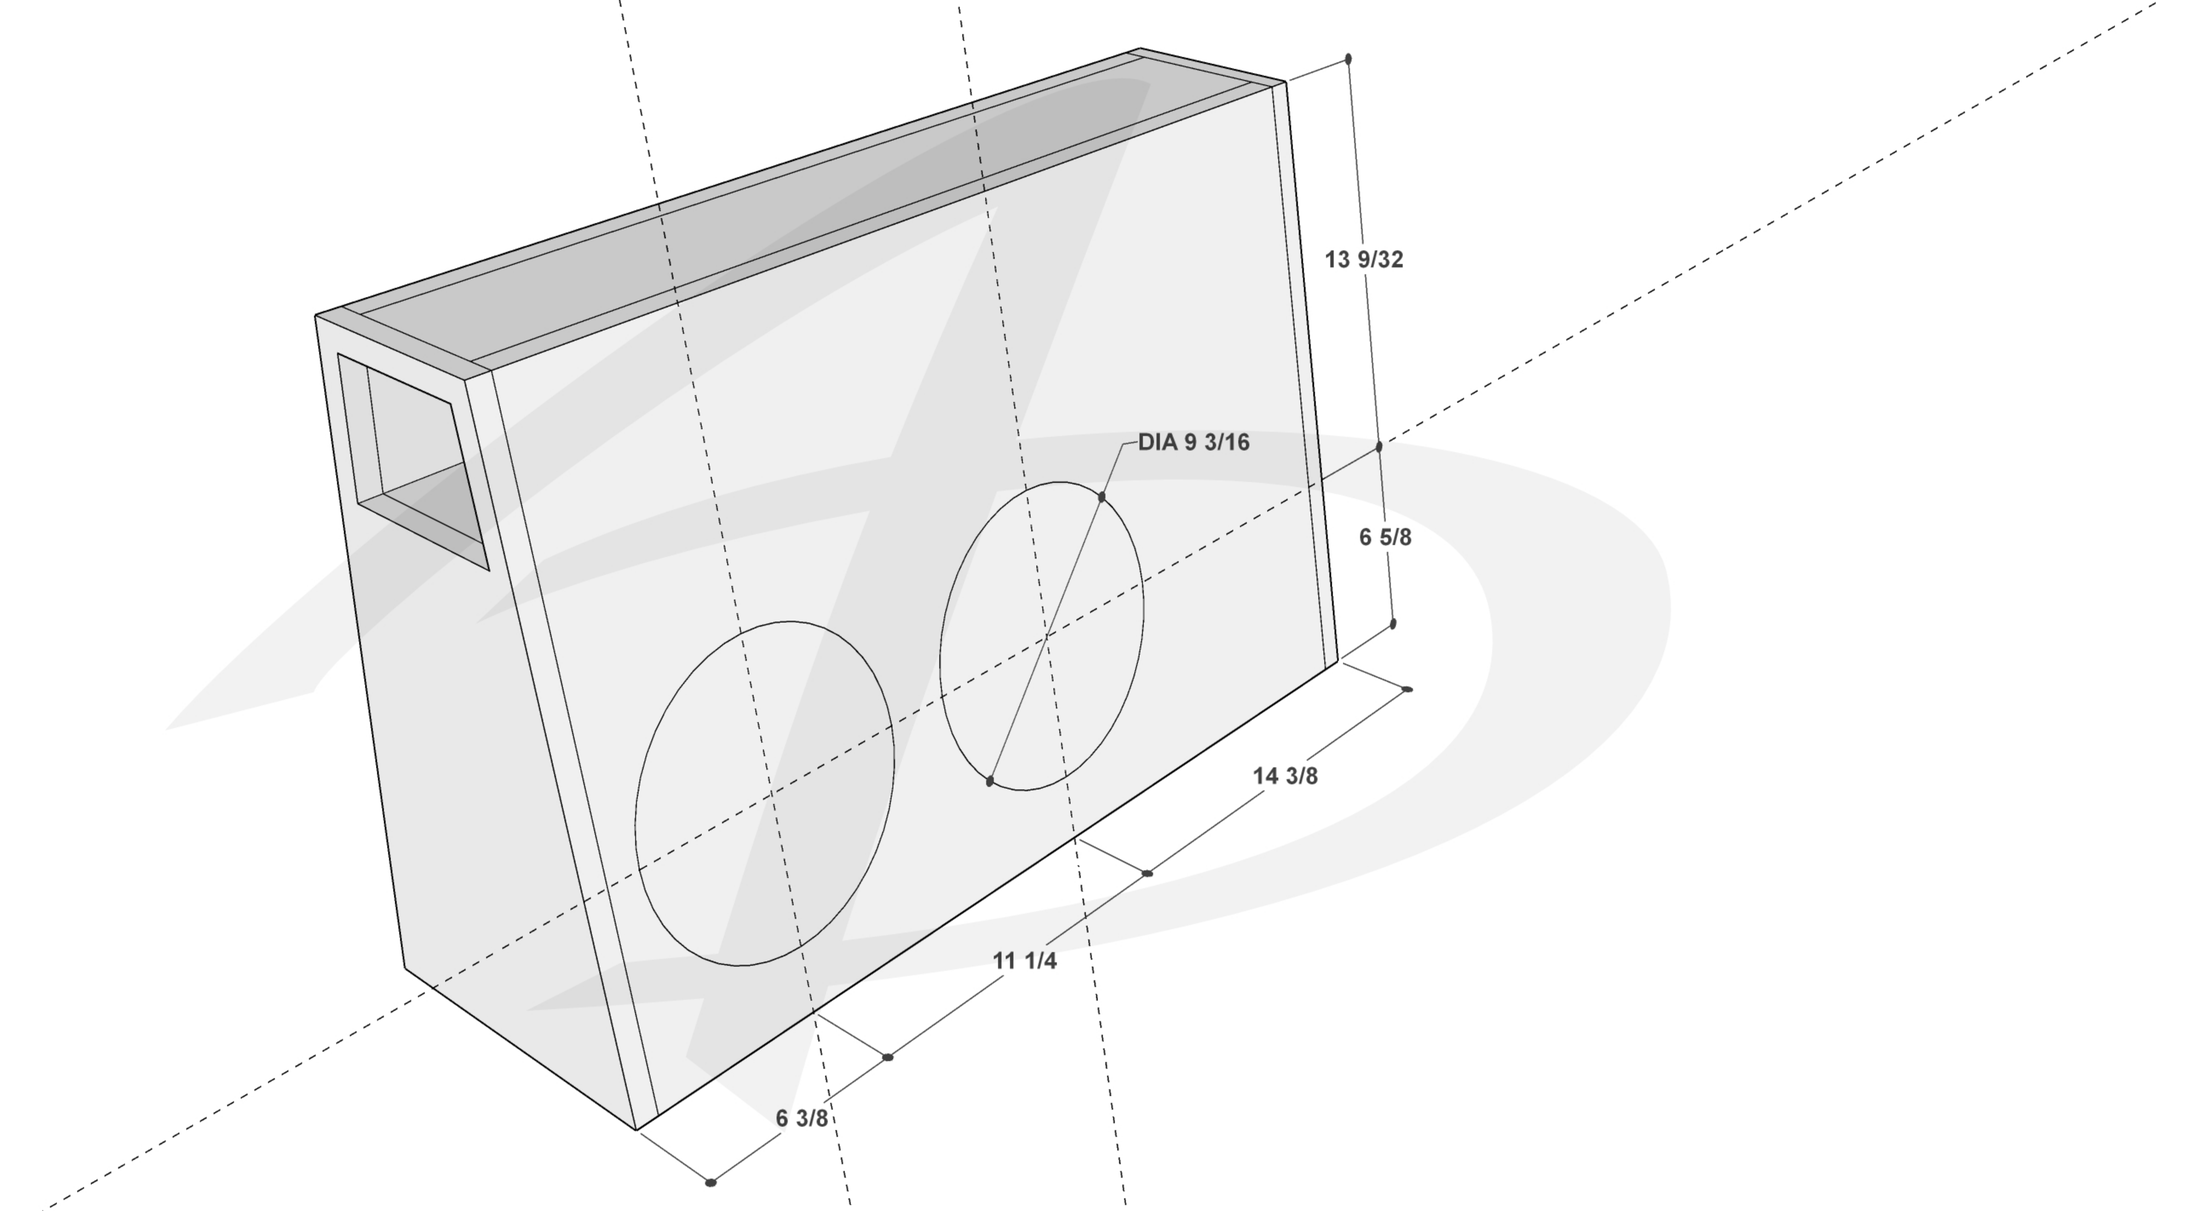
13 9/32
DIA 9 3/16
6 5/8
14 3/8
11 1/4
6 3/8

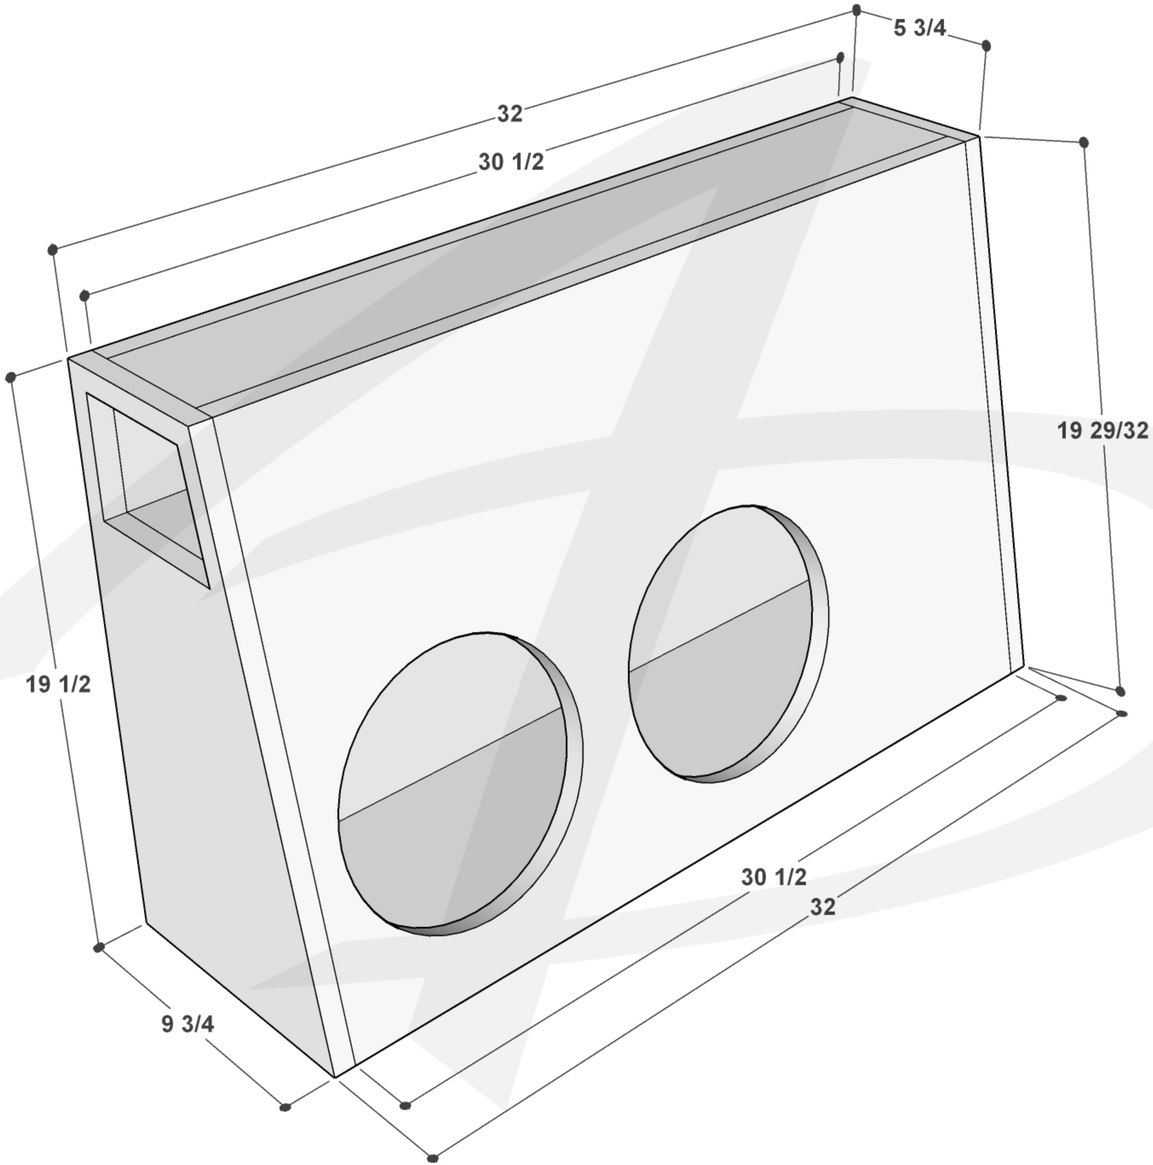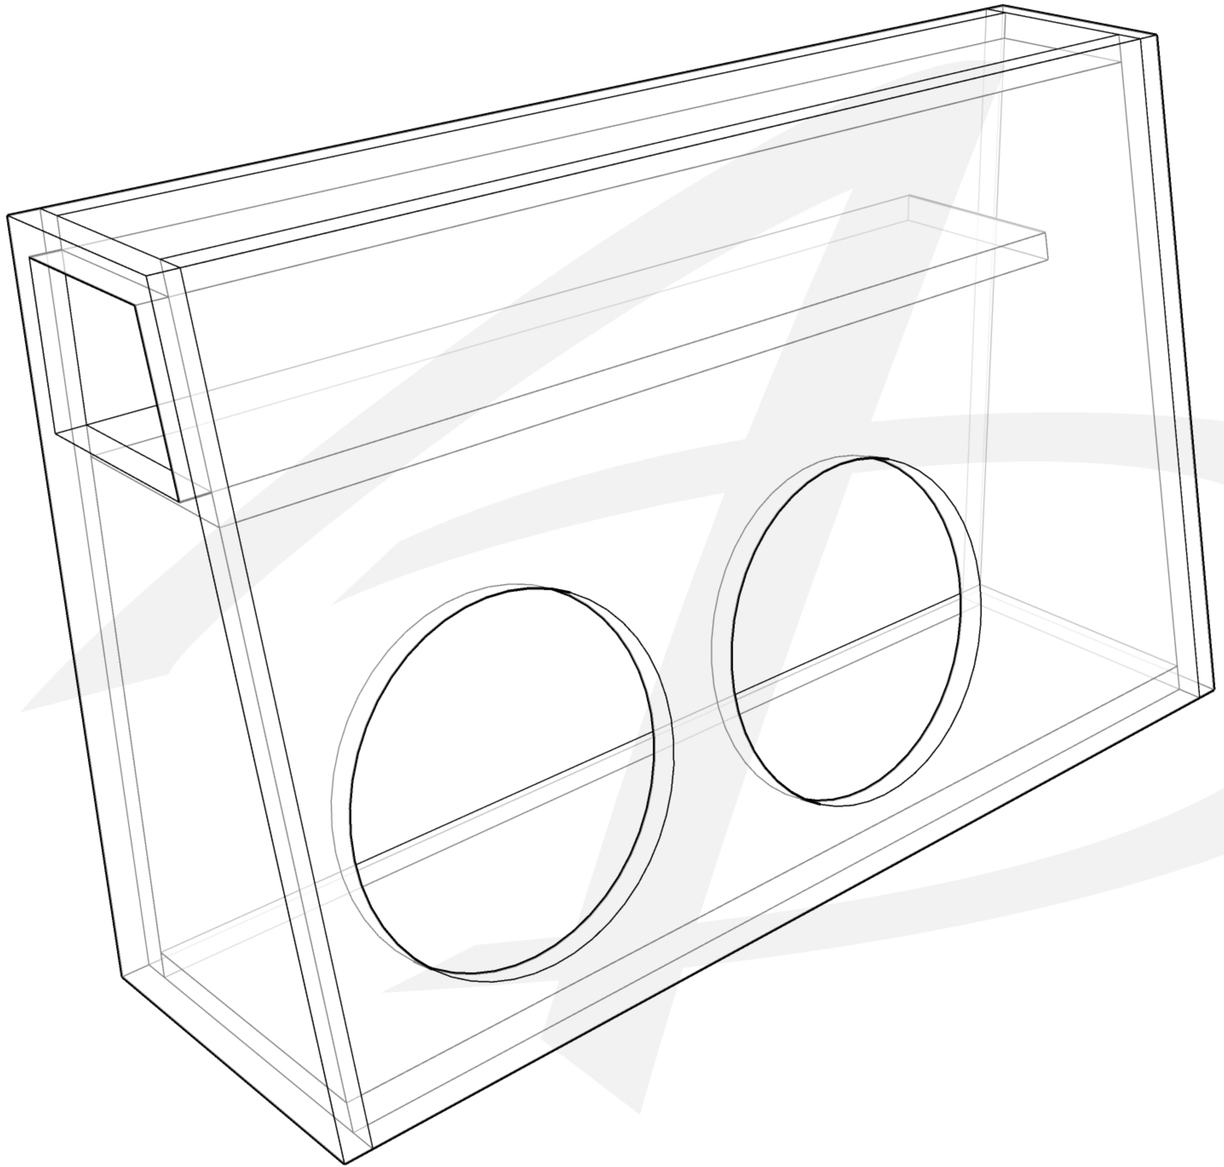
5 3/4
32
30 1/2
19 29/32
19 1/2
30 1/2
32
9 3/4